



700 SERIES REGULATORS

For nearly 40 years the Calgaz brand has been synonymous with unsurpassed quality, reliability and service. To ensure consistent, high-quality products and services, we routinely incorporate best practices in our production processes. Our products and processes are constantly measured against rigorous quality standards as we pursue our goal of being a world-class leader in the calibration gas industry.

Calgaz creates partnerships with our customers in order to understand their needs and provide solutions that exceed their expectations.

If it's important to our customers, it's important to us.


Model No.	Weight	Maximum Inlet Pressure	Minimum Outlet Pressure	Inlet	Outlet	Gauge	For use with Calgaz Cylinders
702	0.4lb/ 0.2kg	500psig/ 35bar	20psig/ 1.4bar	CGA600	3/16" Barb 4.8mm	None	Calgaz 7HP
705	0.4lb/ 0.2kg	1000psig/ 70bar	60psig/ 4.1bar	5/8-18 UNF	3/16" Barb 4.8mm	0-1000psig/ 70bar	Calgaz 2AL, Calgaz 8AL, Calgaz 6D, Calgaz 10AL
713	0.6lb/ 0.28kg	500psig/ 35bar	20psig/ 1.4bar	CGA600	3/16" Barb 4.8mm	0-500psig/ 35bar	Calgaz 7HP
715	0.5lb/ 0.24kg	1000psig/ 70bar	60psig/ 4.1bar	5/8-18 UNF	3/16" Barb 4.8mm	0-1000psig/ 70bar	Calgaz 2AL, Calgaz 8AL, Calgaz 6D, Calgaz 10AL
718*	0.7lb/ 0.32kg	3000psig/ 207bar	60psig/ 4.1bar	1/4" NPT Internal	3/16" Barb 4.8mm	0-3000psig/ 200bar	Calgaz 5E, Calga 65ALR

Common flow rates are 0.5 LPM, 1 LPM and 1.5 LPM.

Regulators may be ordered with a preset flow as low as 0.2 LPM or as high as 6 LPM. (4 LPM is maximum for model 713).

*Model 718 regulator is also designed for use with refillable cylinders with CGA fittings.

All regulators are warranted for 24 months.

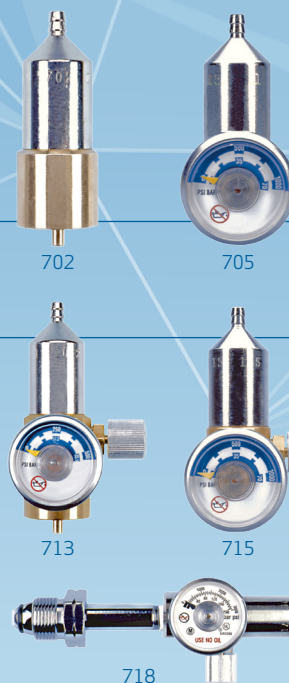

These rugged, economical regulators are hand-crafted by our professionals at the Calgaz plant in Cambridge, Maryland. They are single-stage designs used for the Calgaz 2AL, Calgaz 8AL, Calgaz 6D, Calgaz 7HP, and Calgaz 5E cylinders as indicated. Each is preset to deliver gas at a flow rate specified by the customer.

Construction

Body	Brass
Seat	Teflon®
Piston	Brass
Washer	Buna N (713 only)
O-Rings	Viton®
Bonnet	Nickel Plated Brass

Weight

702 - 0.4lb/0.2kg	713 - 0.6lb/0.28kg
705 - 0.4lb/0.2kg	715 - 0.5lb/0.24kg
	718 - 0.7lb/0.32kg

North America
Global Headquarters
Houston, TX
+1 713 624 8000

**Customer Service and
Manufacturing Facility**
Cambridge, Maryland
+1 800 638 1197

Europe, Middle East & Africa
Customer Service and
Manufacturing Facility
Stoke-on-Trent, United Kingdom
+44 178 256 6897

Australia
Victoria

Asia
Singapore
+65 6265 3788

China
Shanghai
+86 21 6090 3711

info@calgaz.com

CALGAZ.COM

